


UNI • VERS CRYSTAL ELEVATOR



Elegant Interior Finishes

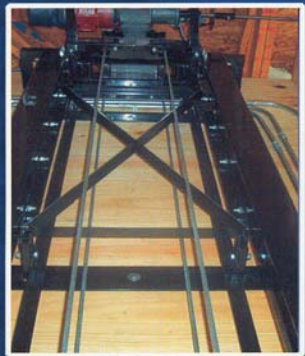

Self Supporting Rigid Guide
Rail Structure

Experience
Excellence
in
Elegance
and
Engineering




Designed for easy installation
in existing locations

The CRYSTAL elevator comes
in a wide range of sizes and
finishes to meet the needs
of any building



Universal Application

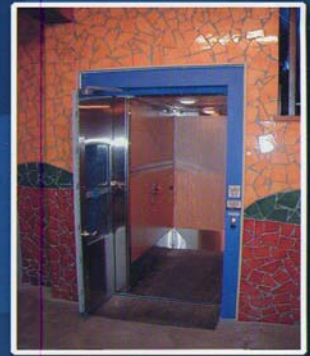


Space Saving Bi-fold Doors




10812 - 181 Street, Edmonton, Alberta Canada T5S 1K8
 1.800.563.4382 • 780.484.4776 • www.trustram.com
 Fax: 780.486.2920 • Toll Free Fax: 888.770.2920

Features & Benefits

- Self Supporting Rigid Guide Rail System**
 - does not require backing plates or reinforced concrete walls, can be placed in a wood framed shaftway
- Traction Sheave Drive**
 - quiet smooth traction sheave drive
 - self locking double reduction worm gear reducer, counterweighted for energy efficient operation
 - variable speed drive
- No Pit**
 - no pit required at lower landing, can be placed directly onto existing basement concrete slab without excavation
 - clip-on ramp bridges 2 1/2" rise onto carriage floor
- No Separate Mechanical Room**
 - all working components of the elevator are contained within the shaftway
 - motor, worm gear reducer and drive sheaves are mounted at the top of the guide rail frame, fitting within an 97" ceiling clearance
- Operation/Controls**
 - flexible PLC logic
 - fully automatic or constant pressure operation
- Universal Carriage Sizes**
 - carriages are built to suit various shaft sizes adapting to building space requirements
 - easy installation into existing or new homes
 - custom finishes
 - folding car gate
- Bi-fold Doors (Optional)**
 - unique RAM Manufacturing design
 - allows door to open in limited space
- Fully Operational 24V DC Battery Backup (Optional)**
 - allows for regular use of the elevator, in both an up and down direction for up to 30 cycles, in the event of a power failure
- Code Compliance**
 - ASME A17.1-1996 PART V, A18.1-1999/CSA B355, B44 PART 5.3

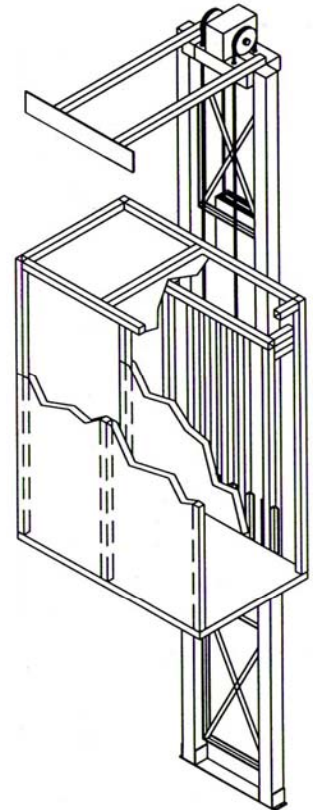

Sample size specifications:

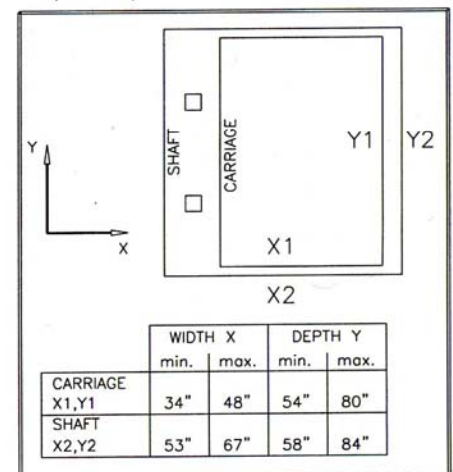

Can be configured to meet US and Canadian Codes

PRINTED IN CANADA